

# ProFormX™ WINDSHIELD

## INSTALLATION INSTRUCTIONS

Fits Yamaha® Drive® and Drive2®



Strut Brackets



Hardware

DRIVE PART# 80-300  
DRIVE2 PART# 80-301

### TOOLS NEEDED

- 10mm Wrench
- 10mm Socket

### PARTS LIST

- Windshield
- Strut Brackets
- Hardware

## STEP 1

Remove protective plastic from all four sides of the windshield.

Attach rubber grommets to lower half of the windshield as shown.



## STEP 2

Attach the strut brackets to the lower half of the windshield, centered between rubber grommet and windshield hinge.


Channel of clips should be opposite of rubber catch as shown.





# STEP 3

Insert rubber grommets into pre drilled factory holes as shown.

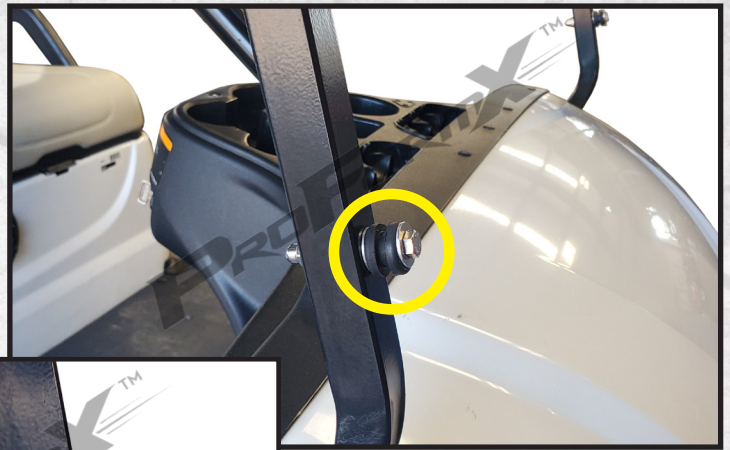

# STEP 4

Using a 10mm wrench and socket, secure windshield to struts using supplied bolt and acorn nut. Do NOT over tighten hardware.



# STEP 5

Use the mounted clips to secure the upper windshield when needed.



Club Car®, Precedent®, and DS® are registered trademarks of Ingersoll Rand, Inc. E-Z-GO®, TXT®, and RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Yamaha®, G-14®, G-19®, G-22® G-29®, and Drive2® are registered trademarks of Yamaha Golf-Car Company and Yamaha Motor Corporation ("Yamaha"). Reference to Club Car®, E-Z-GO®, or Yamaha® or their associated trademarks and products is only for purposes of identifying golf carts with which this ProFormX™ product is compatible. ProFormX™ products are aftermarket parts and are not original equipment parts. ProFormX™ is not connected or affiliated with or sponsored by Club Car®, E-Z-GO®, or Yamaha® or endorsed by Ingersoll Rand Inc®, Textron Innovation Inc®, or Yamaha Golf Cart Company®.