

CHALLENGER SERIES

BY **PROFORMX™**

SAFETY GRAB BAR

INSTALLATION INSTRUCTIONS FOR CHALLENGER SE AND CHALLENGER HD



Safety Grab Bar




TOOLS NEEDED

- 13mm wrench

PARTS LIST

- Safety Grab Bar
- Hardware Pack

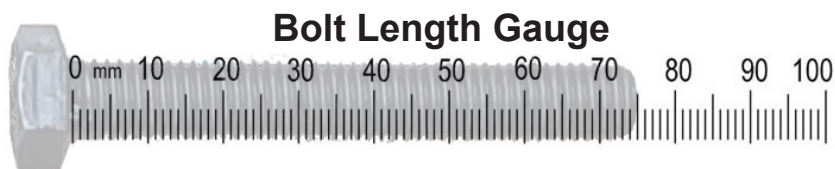


March 2020

STEP 1

Insert and align Grab Bar under Footrest using pre-drilled holes and secure in place using the four 8mm x 45mm bolts and hardware.

Once all four bolts are in place, then tighten using a 13mm wrench.

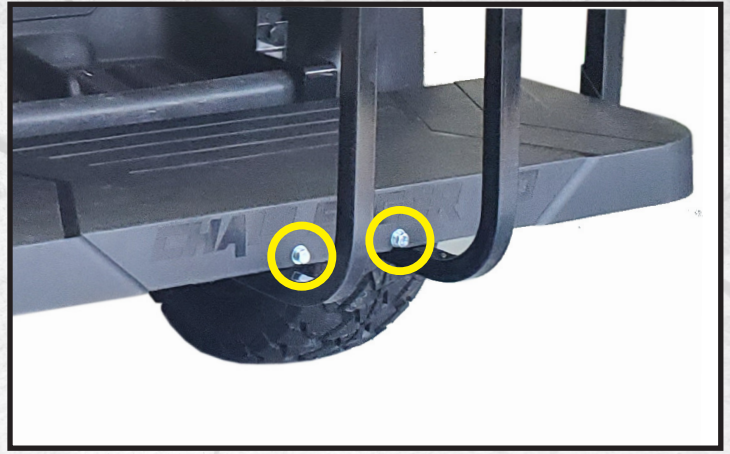

ProForm™

OPTIONAL TRAILER HITCH


STEP 1

When installing a trailer hitch with a grab bar, mount hitch with tabs facing up to bottom of grab bar using supplied hardware.



STEP 2

Attach assembled grab bar and receiver to the predrilled Footrest holes using the four supplied 8mm x 45mm bolts and hardware as shown. Once all four bolts are in place fully tighten using a 13mm wrench.

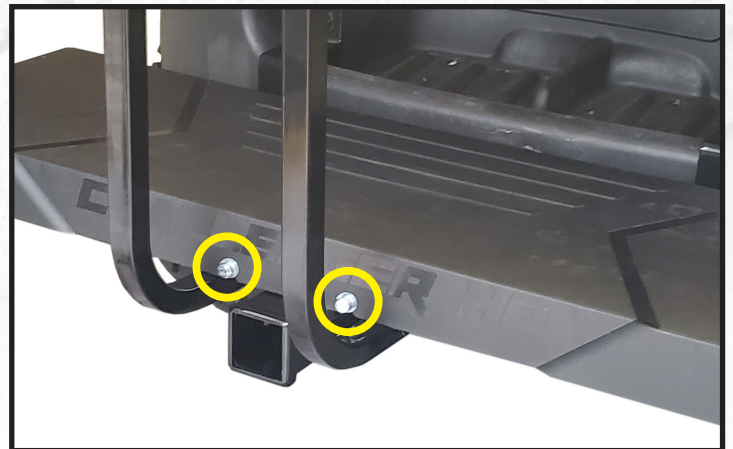

STEP 3

Insert Hitch into Receiver and secure with supplied Pin & Clip.



HARDWARE LIST

Hardware Pack

- 8mm x 45mm Hex Head Bolts - 4
- 8mm Flat Washers - 4
- 8mm Lock Washers - 4

