

CHALLENGER SERIES

BY PROFORMX™

TRAILER HITCH

INSTALLATION INSTRUCTIONS FOR **CHALLENGER SE** AND **CHALLENGER HD**




TOOLS NEEDED

- 13mm socket
- 13mm wrench

PARTS LIST


- Hitch
- Receiver
- Brackets
- Pin & Clip
- Hardware Pack

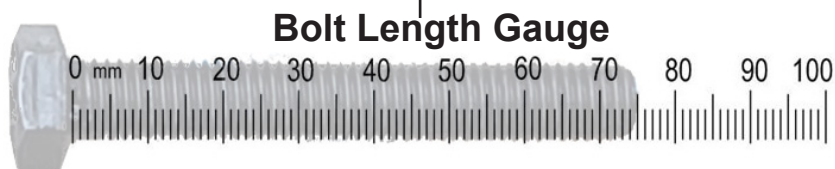

March 2020

STEP 1

Place Brackets on top of Receiver as shown. Line up Bracket mounting holes with equally spaced holes on top of Receiver.

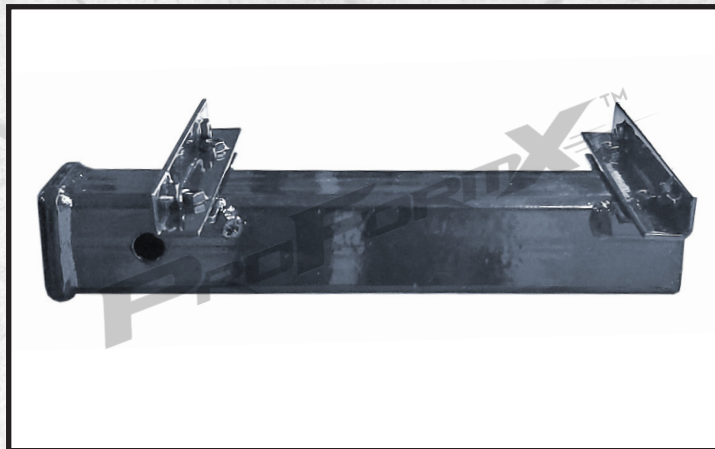


STEP 2

Using the four supplied 8mm x 25mm bolts, washers, & lock washers, attach Brackets to the Receiver as shown. Do NOT fully tighten bolts until after next step.



STEP 3

Attach Receiver and Bracket to the predrilled Footrest holes using the four supplied 8mm x 45mm bolts and hardware as shown. Once all four bolts are in place fully tighten using a 13mm wrench.

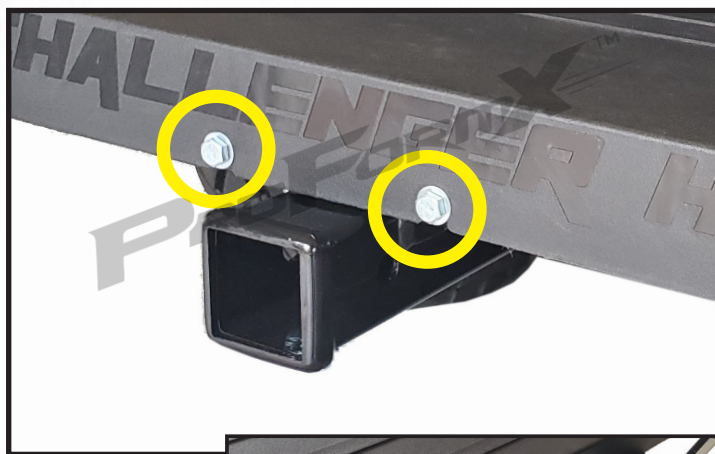

STEP 4

Using a 13mm socket, tighten hitch mounting bracket hardware.



STEP 5

Insert Hitch into Receiver and secure with supplied Pin & Clip.



HARDWARE LIST

Hardware Pack

- 8mm x 25mm Shoulder Hex Bolts - 4
- 8mm x 45mm Shoulder Hex Bolts - 4
- 8mm Lock Washers - 8
- 8mm Flat Washers - 8
- Pin & Clip



OPTIONAL SAFETY GRAB BAR


STEP 1

If installing a grab bar with trailer hitch, mount hitch with 4 tabs facing up to bottom of grab bar using supplied hardware.



STEP 2

Attach assembled grab bar and receiver to the predrilled Footrest holes using the four supplied 8mm x 45mm bolts and hardware as shown. Once all four bolts are in place fully tighten using a 13mm wrench.

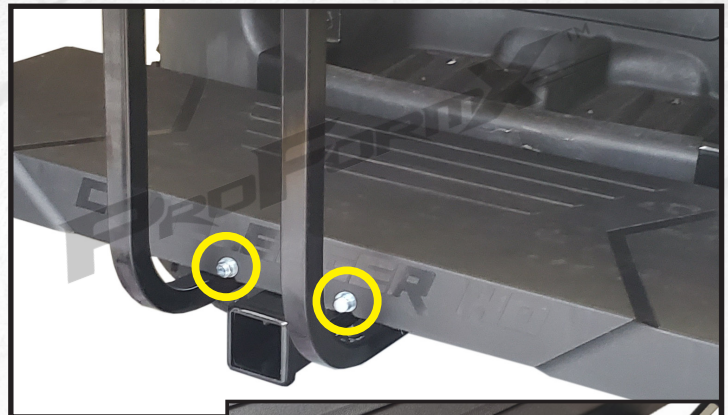

STEP 3

Insert Hitch into Receiver and secure with supplied Pin & Clip.

